

Sediment filter (1st stage) replacement for 4 and 5 stages Countertop RO Systems.

1. Place Countertop RO on working surface




2. Lift fifth stage out of clips. If you have 4 Stage ROI System, skip steps 2 and 3



3. Place fifth stage on side. No need to disconnect fifth stage and tubing.




4. Remove 2 clips and 2 blue c-rings from the fitting

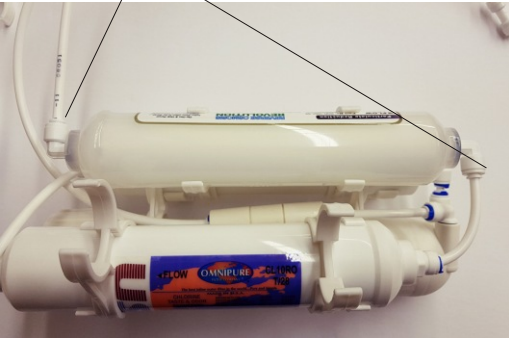


5. Use collet tool to disconnect tubing. Push on fitting by collet tool, at the same time pull tubing out. As second option you can push top of the fitting by fingers



6. Use collet tool to disconnect tubing. Push on fitting by collet tool, at the same time pull tubing out. As second option you can push top of the fitting by fingers

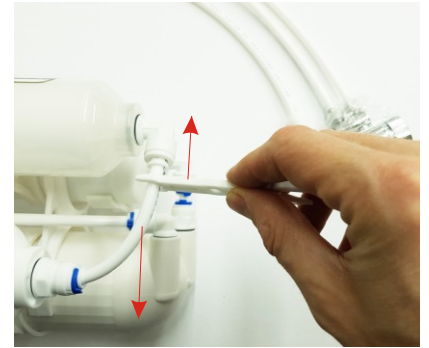

7. Results (steps 5 and 6)

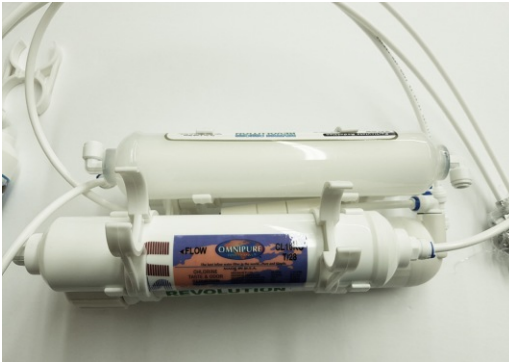


8. Remove first stage from clips



9. If new sediment cartridges do not have elbows unscrew elbows from old sediment stage and screw onto new sediment stage. Make sure elbow setup as shown on picture



10. Insert new sediment stage onto clips. Make sure flow direction as shown on the picture

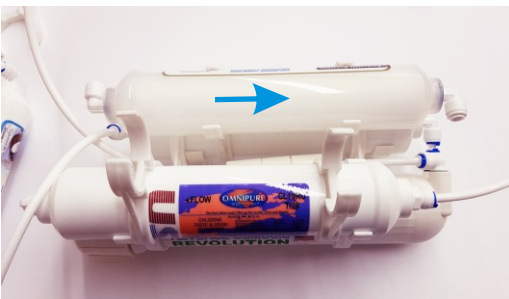

11. Reconnect tubing. Insert tubing first, than push extra 1/4" inside fitting. Correct insertion: If you try to pull out the tubing, it will stick inside fitting.



12. Insert 2 clips and 2 c-rings



13. Move fifth stage in position as shown below



14. First push down fifth stage onto clips located on sediment filter



15. Push down fifth stage onto clip(s) located on second stage

